
R720 Access Point Quick Setup Guide

This *Quick Setup Guide* provides step-by-step instructions on how to set up your Ruckus Wireless ZoneFlex R720 Dual Band 802.11ac Multimedia Wi-Fi Access Point (AP). After completing the steps described in this Guide, you will be able to place the R720 at your site and provide wireless network access to users. The rest of this document refers to the R720 as an AP.

NOTE: The minimum software revision for the R720 is ZoneFlex standalone AP base image 106.0 or later, or SmartZone 3.5 or later, or ZoneDirector 10.0 or later.

FIGURE 1 ZoneFlex R720 AP

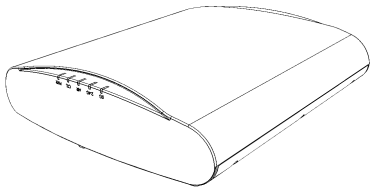

This Guide in Other Languages

- 请从以下网站获得该指南的简体中文版 https://support.ruckuswireless.com.
- Vous trouverez la version française de ce guide à l'adresse suivante https://support.ruckuswireless.com.
- このガイドの日本語版は https://support.ruckuswireless.com でご覧ください。
- 이 가이드의 한국어 버전은 웹 사이트 (https://support.ruckuswireless.com) 에서 확인하시기 바랍니다.
- Veja a versão em português (Brasil) deste guia em https://support.ruckuswireless.com.
- Puede ver la versión en español (América Latina) de esta guía en https://support.ruckuswireless.com.

Before You Begin

Before deploying Ruckus Wireless testtestettststaasgshgsghad asda products, please check for the latest software and the release documentation.

- Release Notes and other user documentation are available at http://support.ruckuswireless.com/documents.
- Software upgrades are available at http://support.ruckuswireless.com/software.
- Software license and limited warranty information are available at http://support.ruckuswireless.com/warranty.

Copyright © 2024 CommScope, Inc. All rights reserved.
Published March 2024, Part Number 800-70874-001 Rev D

CAUTION! The minimum software revision for the R720 is ZoneFlex standalone AP base image 106.0 or later, or SmartZone 3.5 or later, or ZoneDirector 10.0 or later.

WARNING! The minimum software revision for the R720 is ZoneFlex standalone AP base image 106.0 or later, or SmartZone 3.5 or later, or ZoneDirector 10.0 or later.

IMPORTANT-QSG: The minimum software revision for the R720 is ZoneFlex standalone AP base image 106.0 or later, or SmartZone 3.5 or later, or ZoneDirector 10.0 or later.

Package Contents

- R720 Access Point
- One T-bar mounting assembly kit, including:
  - One T-bar bracket (2 separate plastic parts)
  - Two each 1.0" L x No. 8 steel Phillips panhead mounting screws and plastic wall anchors
- Regulatory flyer
- Product warranty statement
- Declaration of Conformity, if required
- This *Quick Setup Guide*

Step 1: Collecting Setup Requirements, Hardware, and Tools

- A computer running Windows 7 (procedures for common operating systems are similar).
- One Cat 5e (or better) Ethernet cable.
- A Ruckus Wireless 48VDC power adapter (sold separately). --OR-- An 802.3at-compliant Power over Ethernet (PoE) switch or PoE injector.

NOTE: The PoE switch port must run link layer discovery protocol (LLDP) power over Ethernet/MDI (PoE+) in order for the R720 to operate in full-power mode. This may require enabling both LLDP and Power via MDI (dot3) on the switch, if available

Optional hardware and tools:


- Customer-supplied small padlock with a 3.5mm (0.14”) or smaller shackle diameter, used to fasten the AP to the secure mounting bracket or the T-bar bracket.
- Customer-ordered Ruckus Wireless 902-0120-0000 secure mounting bracket kit:
  - If you are mounting the AP on a flat surface using the secure mounting bracket kit, then you need an electric drill with 4.75mm (3/16”) drill bits.
  - If you are mounting the AP on a pipe or pole using the secure mounting bracket kit, then you will also need a 38.1mm to 63.5mm (1.5" to 2.5") pipe or pole, two included stainless steel clamps, and hand tools to tighten the clamps.

Step 2: Connecting Your Computer to the AP

1. After removing your AP from its package, place it next to your computer.
2. Using an Ethernet cable, connect your computer’s network port to the 2.5 Gbps POE In port on the AP (A in Figure 2).
3. Using an AC adapter (sold separately), connect the AP 48VDC port (B in Figure 2) to a convenient (and protected) power source.

   Alternatively, connect the 2.5 Gbps POE In port to a PoE injector or switch for both power and network connectivity.

FIGURE 2 AP Ports

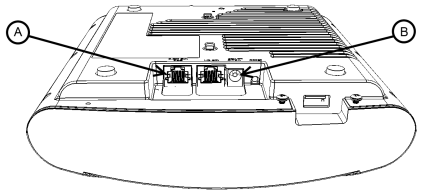

4. Verify that the PWR LED on the AP is a steady green.

Step 3: Preparing Your Computer for AP Setup

NOTE: The following procedures assume Windows 7 as the operating system. Procedures for other operating systems are similar.

1. On your Windows 7 computer, configure your network adapter from the Local Area Connection settings as follows:

   Start > **> Control Panel** > **Network and Sharing Center** > **Change Adapter Settings**
2. Edit the TCP/IPv4 address settings as follows:

   Local Area Connection > **Properties** > **Internet Protocol Version 4 (TCP/IPv4)** > **Properties**

   The Internet Protocol Version 4 (TCP/IPv4) Properties dialog box appears.

   IMPORTANT-QSG: Write down all of the currently active settings so you can restore your computer to its current configuration later (when this process is complete).
3. Select **Use the following IP address** (if it is not already selected) and then make the following entries:
   - **IP address**: 192.168.0.22 (or any available address in the 192.168.0.x network, except 192.168.0.1)
   - **Subnet mask**: 255.255.255.0
   - **Default gateway**: 192.168.0.1

   Leave the DNS server fields empty.
4. Click **OK** to save your changes. Your changes are put into effect immediately.

Step 4: Logging Into the AP

1. As specified in Step 3: Preparing Your Computer for AP Setup on page 1, the computer should be directly connected to your AP through one of the Ethernet ports and powered on, ready for setup.
2. On your computer, open a Web browser window.
3. In the browser, type this URL to connect to the AP:

   `https://192.168.0.1`
4. Press **Enter** to initiate the connection. When a security alert dialog box appears, click **OK/Yes** to proceed.

5. When the **Ruckus Wireless Admin** login page appears, enter the following:
   - **Username**: super
   - **Password**: sp-admin
6. Click **Login**. On your first login, you will be prompted to change the default password.
7. When the **Change Password** dialog box displays, enter the following:
   - **New Password**: Enter a new password.
   - **Confirm Password**: Re-enter the new password.
8. Click **Submit**.
9. Log in using the new password.

Step 5: Customizing the Wireless Settings

TABLE 1 Default AP Settings (for your reference)

Network Names (SSIDs)	Wireless1—Wireless8 (2.4GHz radio) Wireless9—Wireless16 (5GHz radio)
Security (Encryption method)	Disabled for each wireless interface
Default Management IP Address	192.168.0.1

1. On the Web interface menu, click **Configuration** > **Radio 2.4G** or **Configuration** > **Radio 5G**. The**Configure > Wireless > Common** page appears.
2. Verify that the following options are active:

   Channel : SmartSelect

   Country Code: If you are not located in the United States of America, select your current country.
3. Click **Update Settings** if you made any changes.
4. Click any of the **Wireless #** (Wireless LAN Number) tabs at the top of the page.
5. In **Wireless Availability**, click **Enabled**.
6. Delete the text in the SSID field, then type a name for your network that will help your users identify this AP in their wireless network application
7. Click **Update Settings** to save your changes.
8. Repeat Step 4 through Step 7 for each **Wireless #** (Wireless LAN Number) interface that you want to enable.

NOTE: Optional: In a default R720 AP configuration, the AP uses a DHCP-assigned IP address.

If you anticipate logging into the AP regularly to perform monitoring or maintenance once it is in place, then you may want to consider switching from DHCP and instead assigning a static IP address to the AP.

a. On the menu, click **Configuration** > **Internet**.

b. Click the **Static IP** option.

c. Fill in the **IP Address** and **Mask** fields.

d. Click **Update Settings** to save your changes.

9. Click **Logout** to exit the Web interface.
10. When the **Ruckus Wireless Admin** login page reappears, you can exit your browser.
11. Disconnect the AP from the computer and from the power source, and then restore your computer to its original network connection configuration.

NOTE: You can use a Ruckus Wireless controller for bulk AP provisioning and performing other commands. Refer to the controller documents for instructions.

Step 6: Placing the AP in Your Site

1. Move the AP to its permanent location (accessible to both power and network connections). Refer to Mounting Instructions on page 2 for physical installation.
2. Use an Ethernet cable to connect the 2.5 Gbps *POE In* port to an appropriate device:

   The ISP's or carrier's network device

   --OR--

   the Ethernet switch that is connected to the ISP's or carrier's network device.

NOTE: If you will be using PoE, then you will need a Cat 5e (or better) Ethernet cable to connect the AP to the PoE injector or PoE switch.

3. Connect the AP power adapter (or PoE power supply) to the AP, and then to a convenient power source

NOTE: The R720 supports 802.3at (PoE+) mode *only* at initial release. 802.3af PoE is not supported.

4. Verify that the 100/1000/2500 port LED is lit.

   After a short pause to re-establish the Internet connection, you can test the AP.

Step 7: Verifying the Installation

1. Using any wireless-enabled computer or mobile device, search for and select the wireless network you previously configured.
2. When you can connect, open a browser and link to any public Web site.

   Congratulations! Your wireless network is active and ready for use.

Mounting Instructions

The AP can be mounted to a drop-ceiling T-bar, flat surface, or a pole using Ruckus Wireless AP mounting kits. Refer to the following sections:

- Mounting on a Drop-Ceiling T-Bar on page 2
- Mounting on a Flat Surface on page 3
- Mounting on a Flat Surface or Pole Using the Optional Secure on page 3

Mounting on a Drop-Ceiling T-Bar


The factory-supplied T-bar mounting assembly kit allows you to attach the AP to recessed and flush drop-ceiling T-bars.

1. Position the studs on the bottom of the T-bar bracket (A in Figure 3) in the keyholes on the AP enclosure.

NOTE: There is a second set of keyholes that are for optional sideways mounting on a drop-ceiling T-bar. Physical security is not supported when mounting the AP with this set of keyholes.

2. Slide the T-bar bracket away from the Ethernet ports on the bottom of the AP until the AP retainer tab (B in Figure 3) snaps into place, trapping the T-bar bracket studs in the keyholes (C in Figure 3).

FIGURE 3 Attaching the T-bar bracket to the A

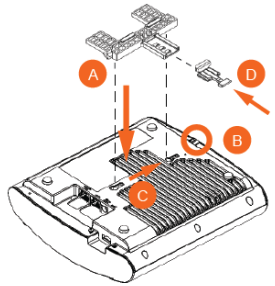


3. Insert the locking tab (D in Figure 3) so it is in the first position on the T-bar bracket (A in Figure 3).
4. Gently push the ceiling tiles, if present, up and out of the way.
5. Position the T-bar bracket so its two clasps grip one edge of the T-bar (A in Figure 4). Make sure that both clasps are gripping the T-bar.

NOTE: For clarity, Figure 4 only shows the T-bar bracket and the T-bar, and does not show the AP.

6. Hold the AP in place and gently push the locking tab (B in Figure 4) until its clasp grips the other edge of the T-bar.

NOTE: Make sure that all three clasps are gripping the T-bar!

FIGURE 4 Attaching the T-bar bracket to the T-bar

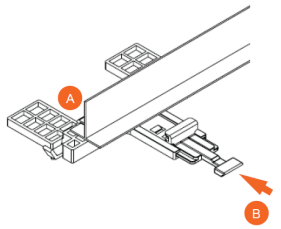

7. (Optional) Attach a customer-supplied padlock through the bracket AP retainer tab (B in Figure 3) to lock the AP to the T-bar bracket studs.

   When you are done, the AP is mounted.


Removing the AP from the T-bar

1. Move the ceiling tiles out of the way, if present.

Copyright © 2024 CommScope, Inc. All rights reserved.
Published March 2024, Part Number 800-70874-001 Rev D

2. Gently lift up the locking tab (A in Figure 5) by sliding your finger under the tab.
3. Rotate the AP- and-T-bar bracket assembly (B in Figure 5). The AP-and-T-bar bracket assembly comes away from the T-bar.


FIGURE 5 Removing the AP and T-bar bracket from the T-bar

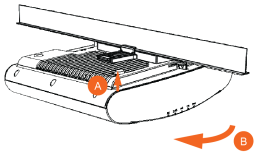

Removing the T-bar bracket from the AP

1. If the AP is locked to the T-bar bracket, then remove the lock.
2. Gently lift up the T-bar bracket locking tab (A in Figure 6) and push the AP retainer tab (B in Figure 6) to the side at the same time.
3. While lifting up the T-bar bracket locking tab and pushing the AP retainer tab to the side, gently push the T-bar bracket (C in Figure 6) toward the Ethernet ports on the bottom of the AP until the bracket detaches from the AP.

FIGURE 6 Removing the T-bar bracket from the AP

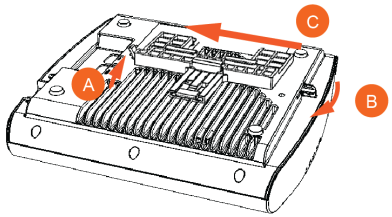

Mounting on a Flat Surface


The factory-supplied mounting screws and plastic wall anchors allow you to attach the AP to a wall or ceiling

1. Use the Mounting Template on the last page of this Quick Setup Guide to mark the locations for two drill holes on the mounting surface.

   NOTE: There is a second set of keyholes that are for optional sideways mounting on a flat surface. Physical security is not supported when mounting the AP with this set of keyholes.

2. Use a 4.75mm (3/16”) drill bit to drill holes approximately 25mm (1”) deep into the mounting surface.
3. Insert the factory-supplied anchors (A in Figure 7) and mounting screws (B in Figure 7) into the mounting surface, leaving approximately 6 mm (1/4”) of the screw heads protruding for the AP enclosure.

FIGURE 7 Flat surface mounting

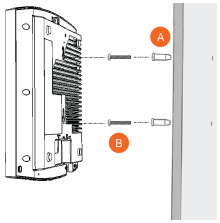

4. Place the AP onto the mounting screws so the screw heads enter the keyholes on the AP enclosure, and push the AP down until the AP retainer tab (B in Figure 6 on page 3) snaps into place.
5. (Optional) Attach a customer-supplied padlock through the integral AP retainer tab (B in Figure 6 on page 3) to lock the AP to the mounting screw heads.

Removing the AP from the factory-supplied mounting screws

Push sideways on the AP retainer tab (B in Figure 6 on page 3), to unlock, then push the AP up to release the AP enclosure from the mounting screws.

Mounting on a Flat Surface or Pole Using the Optional Secure

NOTE: For more complete instructions, refer to the Mounting Guide that comes with the secure mounting bracket.

The customer-ordered Ruckus Wireless secure mounting bracket kit (ordering part number 902-0120-0000) includes a metal mounting bracket and provides greater security when attaching the AP to flat surfaces (walls and ceilings) and to poles.

- If you are mounting the AP on a flat surface, then you will also need an electric drill with a 4.75mm (3/16”) drill bit, and the four No. 6 zinc plated screws and plastic wall anchors included with the kit.
- If you are mounting the AP on a truss or pole, then you will also need the two pipe clamps included with the kit.

Continue with the following:

1. If you are mounting the AP on a flat surface, then use the secure mounting bracket as a template to mark the locations for four drill holes on the mounting surface. There are four screw holes available on the secure mounting bracket.

   Fasten the bracket to the flat surface using four mounting screws and plastic wall anchors and continue with Step 3.

2. If you are mounting the AP on a pipe or pole, then feed the two stainless steel clamps included with the kit through the slots on the secure mounting bracket. Use common hand tools to tighten the clamps around the pipe or pole.

   After the bracket is attached, continue with Step 3.

3. Insert the two studs on the secure mounting bracket into the keyholes on the bottom of the AP, as shown in Step 3.

   NOTE: There is a second set of keyholes that are for optional sideways mounting on a flat surface. Physical security is not supported when mounting the AP with this set of keyholes.

4. Slide the AP toward the Ethernet ports on the AP. The AP has a built-in lock for the secure mounting bracket studs, and snaps into the locked position when the studs are fully in the keyholes.
5. (Optional) Attach a customer-supplied padlock through the integral AP retainer tab (B in Figure 3 on page 2) to fasten the AP to the secure mounting bracket studs.

Removing the AP from the secure mounting bracket

1. If the AP is locked to the secure mounting bracket, then remove the lock
2. Gently push and hold the AP retainer tab (B in Figure 6 on page 3) to the side to release the secure mounting bracket.
3. While holding the AP retainer tab to the side, slide the AP away from the Ethernet ports on the bottom of the AP.

Copyright © 2024 CommScope, Inc. All rights reserved.
Published March 2024, Part Number 800-70874-001 Rev D

For More Information


For information on how to configure and manage the AP, refer to the *RUCKUS Access Point User Guide*, available from http://docs.commscope.com/?docs-box.

For the product data sheet, refer to https://www.ruckusnetworks.com/products/wireless-access-points/.

RUCKUS Wireless LLC is a wholly owned subsidiary of CommScope, Inc.

© 2024 CommScope, Inc. All rights reserved.

CommScope and the CommScope logo are registered trademarks of CommScope and/or its affiliates in the U.S. and other countries. For additional trademark information see https://www.commscope.com/trademarks. All product names, trademarks, and registered trademarks are the property of their respective owners.

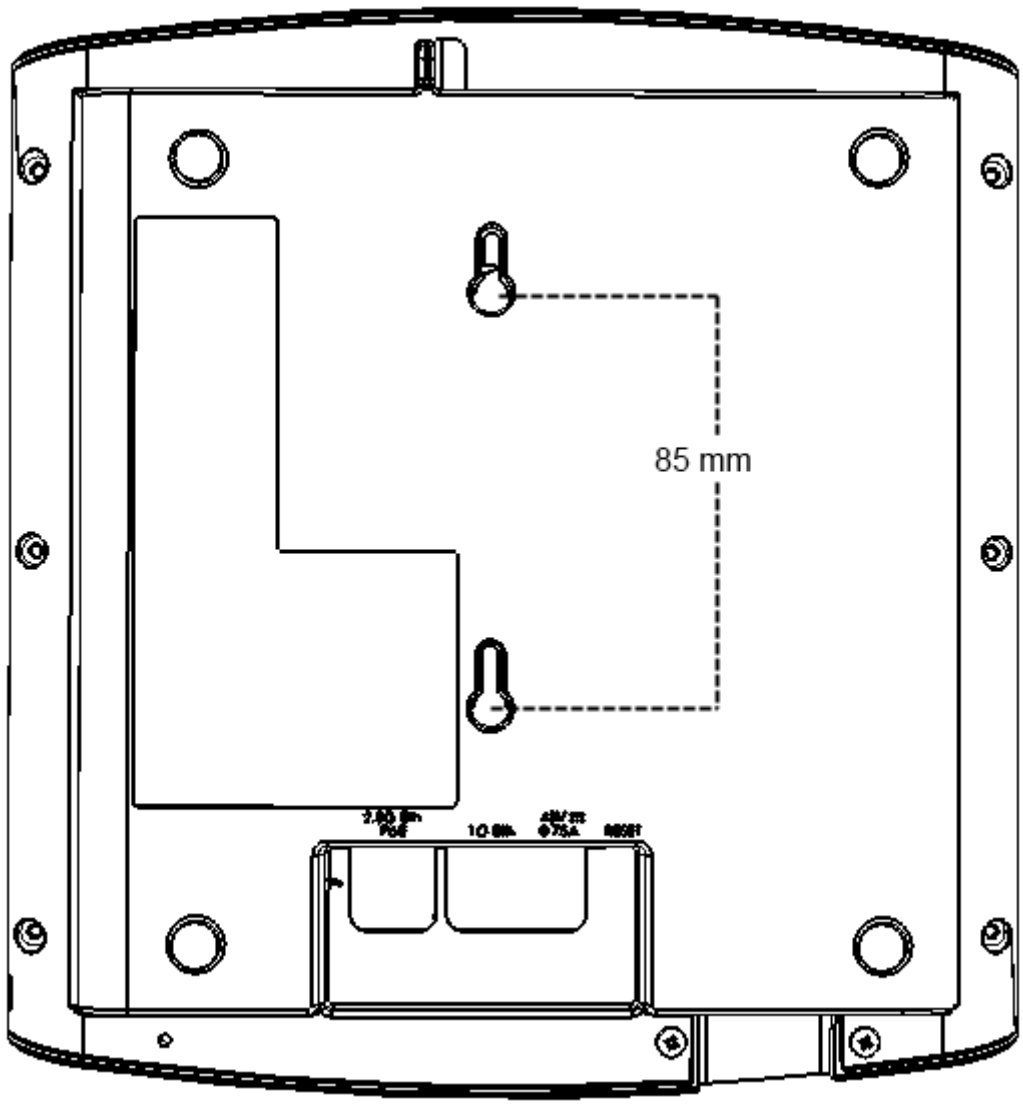

Copyright © 2024 CommScope, Inc. All rights reserved.
Published March 2024, Part Number 800-70874-001 Rev D