COMMSCOPE®
RUCKUS®

T-Bar Bracket Quick Setup Guide

This Quick Setup Guide provides instructions on how to install a RUCKUS Access Point (AP) using the T-Bar Bracket accessory mounting kit.


Mounting Instructions

Mounting on a Drop-Ceiling T-Bar

The T-bar mounting assembly kit (part number: 902-0196-0000) allows you to attach the AP to recessed and flush drop-ceiling T-bars.

1. Position the studs on the bottom of the T-bar bracket (1 in Figure 1) in the keyholes on the AP enclosure.
2. Slide the T-bar bracket away from the Ethernet ports on the bottom of the AP until the AP retainer tab (2 in Figure 1) snaps into place, trapping the T-bar bracket studs in the keyholes (3 in Figure 1).


FIGURE 1 Attaching the T-Bar Bracket to the AP

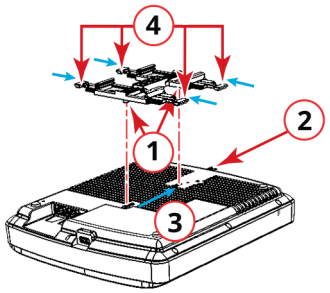

3. Insert the locking tabs (4 in Figure 1) so they are in the first position on the T-bar bracket.
4. Gently push the ceiling tiles, if present, up and out of the way.
5. Align the centerline of the bracket or AP with the centerline of the T-bar. Push the four locking tabs toward the T-bar until they grip the edges of the T-bar and seat in their locked positions.

   After installation, the centerline of the AP should be aligned with the centerline of the T-bar.

FIGURE 2 Attaching the T-Bar Bracket to the T-Bar

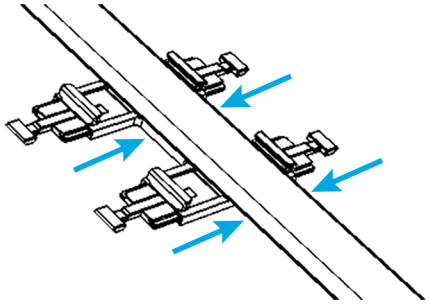


Removing an External Bracket from a T-Bar

To remove the external brackett from the T-Bar:

1. Gently push the ceiling tiles up and out of the way.
2. Slide the locking tabs away from the T-bar to release the AP-bracket assembly from the T-bar.

   The AP and T-bar bracket assembly comes away from the T-Bar.


FIGURE 3 Removing the External Bracket from the T-Bar

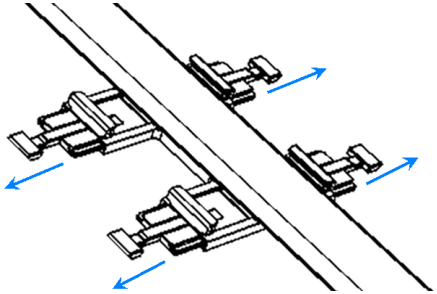

Removing the External Bracket from the AP

1. Insert the unit removal pin into the hole on the front of the AP to unlock the mounting bracket from the AP enclosure. (On some APs, this is achieved not using a pin and hole, but by moving a metal lever on the AP.)
2. Slide the mounting bracket toward the Ethernet ports on the AP until it detaches from the AP (refer to Figure 4).

FIGURE 4 Removing the External Bracket from an AP

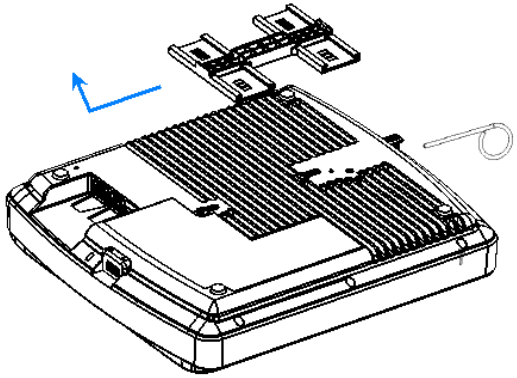

Caution Notices

A caution calls your attention to a possible hazard that can damage equipment.

CAUTION! The equipment is intended for installation in a Restricted Access Location.

CAUTION! The product is intended to be supplied by an Underwriters Laboratories (UL) Listed power supply marked Class 2 or LPS and rated 48 VDC, 1.04A (50W or higher).

CAUTION! The equipment can be connected to PoE networks without routing to the outside plant.

For More Information

For information on how to configure and manage the AP, refer to the *RUCKUS Indoor Access Point User Guide*, available from http://docs.commscope.com/?docs-box.

© 2022 CommScope, Inc. All rights reserved.

ARRIS, the ARRIS logo, COMMSCOPE, RUCKUS, RUCKUS WIRELESS, the Ruckus logo, and the Big Dog design are trademarks of CommScope, Inc. and/or its affiliates. Wi-Fi Alliance, Wi-Fi, the Wi-Fi logo, Wi-Fi Certified, the Wi-Fi CERTIFIED logo, Wi-Fi Protected Access, the Wi-Fi Protected Setup logo, Wi-Fi Protected Setup, Wi-Fi Multimedia and WPA2 and WMM are trademarks or registered trademarks of Wi-Fi Alliance. All other trademarks are the property of their respective owners.

Copyright © 2022 CommScope, Inc. All rights reserved.
Published April 2022, Part Number 800-73076-001 Rev B